 








 
 

 
 
 

 



 


 



 
 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Audio I/II		Dual
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sleep		Sleep
	Recall		Back
	Exit		Exit
	Menu		Menu



 
 
 
 

 


 




 
 
 
 


 
 
 
 
Originalfernbedienung Ersatzfernbedienung

	Source		AV
	Info		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Vol +		Vol +
	Vol -		Vol -
	CH +		Ch +
	CH -		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	P.Mode		Format
	S.Mode		Shift + Dual





Originalfernbedienung Ersatzfernbedienung

	P.Size		Eject
	Subtitle		Subt
	Play/Pause / TS		Play
	Play/Pause / TS		Pause
	Stop		Stop
	Rec		Rec
	Text		Text
	<< / PVR List		<<
	<< / PVR List		List
	>> / DTV/Radio		>>
	>> / DTV/Radio		TV/R
	I<< / Fav.CH		I<<
	I<< / Fav.CH		Pre Ch
	>>I / Guide		>>I
	>>I / Guide		Guide

Originalfernbedienung Ersatzfernbedienung

