

 
 



 




 

 
 


 

 
 

 

 



 







Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off	 Power	Menu Right	 Right
Audio Off	 Mute	Return	 Back
Slow Down	 Ch -	Menu Down	 Down
Stop	 Stop	Progr.	 Sleep
Slow Up	 Ch +	Volume+	 Vol +
Pause	 Pause	Volume-	 Vol -
Subt.	 Subt	Next	 >>
Auto/Track	 Red	1	 1
Rep/A-B	 +  Shift + Text	2	 2
Title	 List	Top Menu	 D. Menu
Repeat/1/All	 Text	Prev.	 <<
Zoom	 Eject	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7
OK Enter	 Ok	8	 8



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
9		9	
+10		Guide	
0		0	
Record		Rec	
Rewind		<<	
Shuffle		TV/R	
C/CH		Pre Ch	
Np		Blue	
Tone		Yellow	
Remain		Green	
Open/Close	 + 	Shift + Mute	
Vocal/Assist		Media	
Angle		Format	
Timer		AV	
Play		Play	
Game		Smart	
Echo+	 + 	Shift + Ch +	
F.Forward		>>	
Audio		Dual	
Echo-	 + 	Shift + Ch -	
Clear/00:00	 + 	Shift + 9	

