














**Originalfernbedienung Ersatzfernbedienung**

	Marche		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / Video		TV/Radio /
	TV / Video		Shift + 4
	TV / Video		Shift + 1
	0		0
	Zappub		Smart / List
	ENR/DEP		Rec / Rec Mode
	Eject		Eject / Surround

**Originalfernbedienung Ersatzfernbedienung**

	Play/Lect		Play / Slow
	<</RET		<< / Tune-
	>>/AV		>> / Tune+
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	EFF./Clear		Exit / Cancel / Clear
	OK/Horloge		OK
	i		Info / Angle
	LP		Setup / OPT /
	AV		AV / Input / RDS
	Verrouillage		Display / Media
	Smart Stop		Shift + Stop /
	Smart Repeat		Green / APP / Repeat

