






 

 

 



 



 

 

 



 

 

 

 

 
 

 










 




 


 
 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|--------|
|  | Power |  | Power |
|  | Tv/Av |  | AV |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Mute |  | Mute |
|  | Sleep |  | Sleep |
|  | Recall |  | Pre Ch |
|  | -/-- |  | Guide |
|  | S.Mode |  | Dual |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|--------|
|  | System |  | Media |
|  | Call |  | Back |
|  | P.Mode |  | Format |
|  | Menu |  | Menu |
|  | Up |  | Up |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Left |  | Left |
|  | CC |  | Subt |
|  | MTS |  | Info |

