
 






 

 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	DVB		Smart
	[/=]		Options
	[=]		Text
	[=O]		Subt
	[=◆]/FAV-		AV
	[=+]/FAV+		Dual
	[=X]/EPG		Guide
	[=?]/Radio		TV/R
	Red/PP		Red
	Green/♪		Green
	Yellow/[ ]		Yellow
	Blue		Blue
	[++]		3D
	≡i		Info
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	DVB Menu		Media
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	PIP		Format
	Recall		Pre Ch
	Zap		Back
	Freeze		Pause
	←AV		Shift + AV
	AV→		Shift + Format
	16:9		D. Menu





## Originalfernbedienung Ersatzfernbedienung

	Zoom		Eject
	S/M/D	+	Shift + Text
	PC		>>
	TV		<<
	DVI		I<<
	YPbPr		>>I
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

## Originalfernbedienung Ersatzfernbedienung