








 









 



 






 
 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	DTV		Smart / List
	Radio		TV/Radio /
	USB		Shift + 8
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv Guide		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	FAV		Fav / Marker / PC
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Source		AV / Input / RDS
	Info		Info / Angle
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK





Originalfernbedienung Ersatzfernbedienung

	Aspect	+	Shift + Picture / Format
	Sleep		Sleep / Timer
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	Text Hold		Setup / OPT /
	Zoom/Text/DVD		Zoom / Size
	Power/Display		Display / Media
	Rec		Rec / Rec Mode
	DVD Menu		D.Menu / Top
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop/Eject		Stop / Hold
	Rec List/DVD	+	Shift + Rec / Rec Mode
	<< PVR/DVD		<< / Tune-
	>> PVR/DVD		>> / Tune+
	Play		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	Red/Goto		Red / Netflix / Search
	Green/A-B		Green / APP / Repeat
	Yellow/Angle/3D		Yellow / YouTube / Repeat
	Blue/Repeat		Blue / Prime Video / Random

