


 











 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PRE-CH		Shift + Fav / Marker / PC
	Vol+		Vol+
	FAV.CH		Fav / Marker / PC
	Vol-		Vol-
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	PR+		CH+ / Page+
	PR-		CH- / Page-
	Source		AV / Input / RDS
	Info		Info / Angle
	Menu		Menu / Home
	Guide		Guide / EPG / -/--
	Tools		Setup / OPT /
	Return		Back / Return
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	CH List		Smart / List
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TTX/MIX		Text / Goto
	AD		Audio / Lang I/II
	SUBT.		Subtitle / EQ

