




Originalfernbedienung Ersatzfernbedienung

|   |            |   |       |
|---|------------|---|-------|
|    | Power      |    | Power |
|    | Mute       |    | Mute  |
|    | 1          |    | 1     |
|    | 2          |    | 2     |
|    | 3          |    | 3     |
|    | 4          |    | 4     |
|    | 5          |    | 5     |
|    | 6          |    | 6     |
|    | 7          |    | 7     |
|    | 8          |    | 8     |
|    | 9          |    | 9     |
|  | 0          |  | 0     |
|  | Menu       |  | Menu  |
|  | Exit       |  | Exit  |
|  | Up / CH+   |  | Up    |
|  | Up / CH+   |  | Ch +  |
|  | Down / CH- |  | Down  |


Originalfernbedienung Ersatzfernbedienung

|   |              |   |                |
|---|--------------|---|----------------|
|    | Down / CH-   |    | Ch -           |
|    | Right / Vol+ |    | Right          |
|    | Right / Vol+ |    | Vol +          |
|    | Left / Vol-  |    | Left           |
|    | Left / Vol-  |    | Vol -          |
|    | OK / Store   |    | Ok             |
|    | P-           |    | Shift + Ch -   |
|    | P+           |    | Shift + Ch +   |
|    | EPG          |    | Guide          |
|    | Back         |    | Back           |
|    | i            |    | Info           |
|  | Subtitle     |  | Subt           |
|  | Text         |  | Text           |
|  | Aspect       |  | Format         |
|  | Picture      |  | Shift + Format |
|  | Audio        |  | Dual           |
|  | Sleep        |  | Sleep          |





Originalfernbedienung Ersatzfernbedienung

|   |                |   |         |
|---|----------------|---|---------|
|  | Red / TV/Radio |  | Red     |
|  | Red / TV/Radio |  | TV/R    |
|  | Green / FAV    |  | Green   |
|  | Green / FAV    |  | Pre Ch  |
|  | Yellow / List  |  | Yellow  |
|  | Yellow / List  |  | List    |
|  | Blue / +/-     |  | Blue    |
|  | All CH         |  | Smart   |
|  | White / ?      |  | Options |
|   |                |   |         |
|   |                |   |         |
|   |                |   |         |
|   |                |   |         |
|   |                |   |         |
|   |                |   |         |
|   |                |   |         |
|   |                |   |         |
|   |                |   |         |
|   |                |   |         |

Originalfernbedienung Ersatzfernbedienung

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

