




 

 





 





 



 






 
 
 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Txt		Text
	0		0
	[<>]/4:3/16:9		Format
	TV		TV/R
	Radio		Shift + TV/R
	Help		D. Menu
	Up		Up



 




Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Music		Dual
	WWW		Media
	Video		Smart
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	M		Menu
	Back		Back
	Prog+		Ch +
	Prog-		Ch -





Originalfernbedienung   Ersatzfernbedienung

	Mute		Mute
	Play		Play
	Pause		Pause
	Stop		Stop
	Buy		3D
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I

Originalfernbedienung   Ersatzfernbedienung