


 

 

 

 

 



 

 
 
 

 

 



 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH-		Ch -
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Source		AV
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	List/Rec		List
	USB/Media		Media
	SOS/Help		Options
	EPG/Guide		Guide
	I-I/Goto		Smart
	Rec		Rec



