



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Back / S.Page		Back
	index / PVR List		Smart
	reveal / REC		Rec
	zoom / T.Shift		Eject
	hold / EPG		Guide
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol +		Vol +
	Vol -		Vol -
	I-II		Dual
	Source		AV
	CH +		Ch +
	CH -		Ch -
	Sleep		Sleep
	Menu		Menu
	DTV / Radio		TV/R
	Exit		Exit
	Aspect		Format
	Up		Up





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	P.Mode	 + 	Shift + Format
	S.Mode	 + 	Shift + Dual
	Media		Media
	Slow / Info		Info
	Slow / Info	 + 	Shift + Play
	Step / Subtitle		Subt
	Freeze	 + 	Shift + Stop
	Step / Subtitle	 + 	Shift + Pause
	Play / Pause		Play
	Play / Pause		Pause
	I<<		I<<
	>>I		>>I
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	FAV		Pre Ch
	Repeat / Fav +	 + 	Shift + Right
	A-B / Fav -	 + 	Shift + Left

