



 

 

 
 
 

 

 

 

 
 




 



 


 
 




Originalfernbedienung Ersatzfernbedienung

 
 
 

 

 
 
 



 
 


 
 
 

 
 
 
 
 

 
 
 
 
 

 
 
	Power		Power
	HDMI Control		Smart
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I
	Screen		Format
	Lang		Dual
	Subtitle		Subt
	PIP / World		3D
	Red / Zoom		Red
	Green / Repeat		Green
	Yellow / Root		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue / Title		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Swap		Pre Ch
	Up		Up
	Right		Right
	Down		Down
	Left		Left





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 OK	 Ok		
 P/CH +	 Ch +		
 P/CH -	 Ch -		
 Mute	 Mute		
 Vol +	 Vol +		
 Vol -	 Vol -		
 Menu	 Menu		
 Source	 AV		
 Return	 Back		
 EPG	 Guide		
 Info	 Info		
 Sleep	 Sleep		
 FAV	 Shift + Pre Ch		
 Angle / Media	 Media		
 Search Mode	 TV/R		
 Display	 Shift + Info		
 Presets	 List		

