



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		Source
	Menu		Menu
	ESC		Comp / Video
	Up		Up
	Left		Left
	Enter		Enter
	Right		Right
	Down		Down
	Keystone+		Shift + Up
	Keystone-		Shift + Down
	D-Zoom+		+ / Play
	D-Zoom-		- / Stop
	Volume+		Vol + / Page +
	Volume-		Vol - / Page -
	Timer		Shift + Freeze / Timer
	Auto		Auto

Originalfernbedienung Ersatzfernbedienung

	Aspect		Shift + Eco / Aspect
	Func		Mode
	Blank		Blank / Mute
	Freeze		Freeze / Timer
	ECO		Eco / Aspect

