

 


















 


 
 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Home		Shift + Menu /
	0		0
	YouTube		Shift + Yellow / YouTube /
	Vol+		Vol+
	TV		TV/Radio /
	CH+		CH+ / Page+

 
 











 




 

 

 

 

 

 

 

 

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Source		AV / Input / RDS
	CH-		CH- / Page-
	USB		Shift + 8
	Option		Setup / OPT /
	Info		Info / Angle
	FAV		Fav / Marker / PC
	Menu		Menu / Home
	EPG		Guide / EPG / -/--
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix / Search

 





 





**Originalfernbedienung Ersatzfernbedienung**

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Sleep		Sleep / Timer
	Zoom-		Shift + Zoom / Zoom /
	Zoom+		Zoom / Size
	List		Smart / List
	Text		Text / Goto
	Sub		Subtitle / EQ
	Recall		Shift + Back / Return
	Eco		Display / Media
	<<		<< / Tune-
	>>		>> / Tune+
	I<		I<< / Preset-
	>I		>>I / Preset+
	Rec		Rec / Rec Mode

**Originalfernbedienung Ersatzfernbedienung**

	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Audio		Audio / Lang I/II

