




 

 


 

 



 
 



 


 

 
 

 
 
 


 
 
 
 
 

 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	12/24H		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Pause		Pause
	Restart		Back
	Exit		Exit
	Select		Menu
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Dn		Down
	Right		Right
	Left		Left
	OK		Ok
	F1		List
	F2		Dual
	F3		Subt
	F4		Options
	F5		Sleep
	F6		TV/R
	F7		Format
	F8		3D
	F9		Red
	F10		Green
	F11		Yellow
	F12		Blue

