

 



 

 
 


 


 




 


 

 

 



 




 
Originalfernbedienung Ersatzfernbedienung

|   |         |   |        |
|---|---------|---|--------|
|    | Power   |    | Power  |
|    | Mute    |    | Mute   |
|    | 1       |    | 1      |
|    | 2       |    | 2      |
|    | 3       |    | 3      |
|    | 4       |    | 4      |
|    | 5       |    | 5      |
|    | 6       |    | 6      |
|    | 7       |    | 7      |
|    | 8       |    | 8      |
|  | 9       |  | 9      |
|  | 0       |  | 0      |
|  | -/--    |  | Guide  |
|  | i       |  | Info   |
|  | OO      |  | Dual   |
|  | □       |  | Format |
|  | ⊖ Sleep |  | 3D     |

Originalfernbedienung Ersatzfernbedienung




|   |             |   |         |
|---|-------------|---|---------|
|    | Vol+        |    | Vol +   |
|    | Vol-        |    | Vol -   |
|    | P+          |    | Ch +    |
|    | P-          |    | Ch -    |
|    | (X)         |    | Exit    |
|    | >>I         |    | >>I     |
|    | OK          |    | Ok      |
|    | SEL         |    | Menu    |
|    | Fine Tuing+ |    | Right   |
|   | Fine Tuing- |   | Left    |
|  | TV/AV       |  | AV      |
|  | STD / [≡X]  |  | Smart   |
|  | M           |  | Media   |
|  | Text        |  | Text    |
|  | [ /≡]       |  | D. Menu |
|  | Reveal      |  | TV/R    |
|  | [1<≡]       |  | <<      |

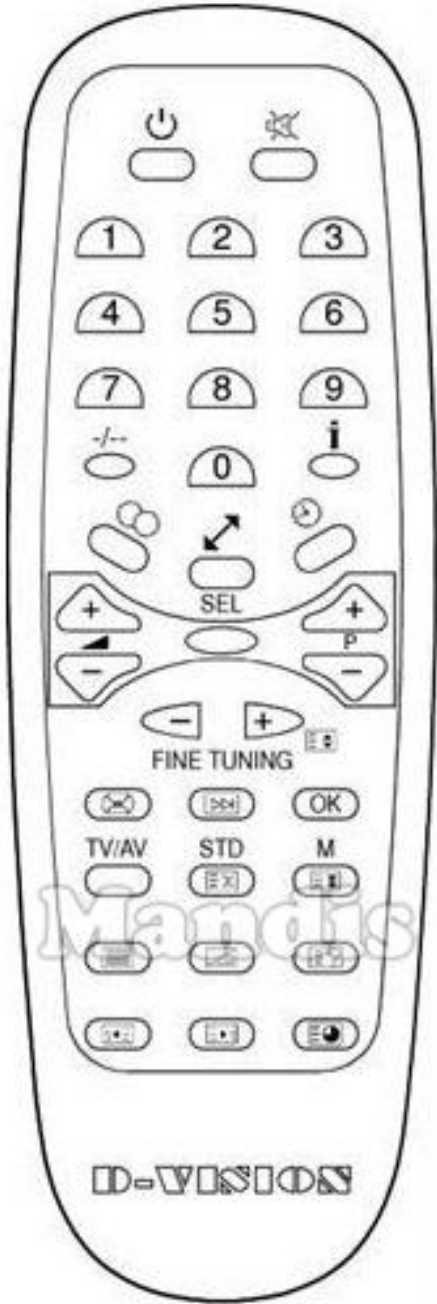



Originalfernbedienung

Ersatzfernbedienung

|   |       |   |         |
|---|-------|---|---------|
|  | [≡>1] |  | >>      |
|  | [≡O]  | SETTINGS<br>OPT   | Options |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |
|   |       |   |         |

Originalfernbedienung

Ersatzfernbedienung

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

