



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Tv/Rad		TV/R
	Camera		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--/EPG		Guide
	RCL		3D
	P/Pg+		Ch +

**Originalfernbedienung    Ersatzfernbedienung**

	P/Pg-		Ch -
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	v--		Smart
	i		Info
	[+]		Format
	♪		Dual
	[▼]		AV
	FAV		Pre Ch
	Red		Red





Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	<<		<<
	Play		Play
	>>		>>
	[↔]		Back
	>		List
	Stop		Stop
	Pause		Pause
	[[]]		Options
	[...]		Subt
	[≡]		Text
	< ?	 + 	Shift + Dual

Originalfernbedienung Ersatzfernbedienung








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--/EPG		Guide
	RCL		3D
	P/Pg+		Ch +
	P/Pg-		Ch -
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[↔]		Back
	[...]		Subt
	[≡]		Text

