



 


 

 



 





 

 
 


 

 


 








 

 

 

 

 

 
 



 
 







Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Audio		Dual
	Recall		Back
	Subtitle		Subt
	Info		Info

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	EPG		Guide
	Exit		Exit
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Text		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue





Originalfernbedienung Ersatzfernbedienung

 REC LIST	Rec List	 LIST	List
 TV/RADIO	Tv/Radio	 SEARCH TV/R	TV/R
 STOP	Stop		Stop
 PAUSE	Pause		Pause
 REV	<<		<<
 FWD	>>		>>
 RECORD	Record	 REC MODE	Rec

Originalfernbedienung Ersatzfernbedienung