



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	<< / Sub		<< / Tune-
	<< / Sub		Subtitle / EQ
	>> / TTX		Text / Goto
	>> / TTX		>> / Tune+
	Play		Play / Slow
	Rec		Rec / Rec Mode
	TV/R		TV/Radio /
	Sat		Shift + 0
	Pause / T		Pause / Step / Freeze
	Stop		Stop / Hold
	Green / App		Shift + Green / App /
	Green / App		Green / APP / Repeat
	Red / Audio		Red / Netflix / Search
	Red / Audio		Audio / Lang I/II
	Yellow		Yellow / YouTube / Repeat
	Blue / R.List		Smart / List

Originalfernbedienung Ersatzfernbedienung

	Blue / R.List		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Up / CH+		Up
	Recall		Back / Return
	Left / Vol-		Left
	OK		OK
	Right / Vol+		Right
	Menu		Menu / Home
	Down / CH-		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	PVR		Display / Media
	Page+		CH+ / Page+
	Vol-		Vol-
	Fav		Fav / Marker / PC
	Page-		CH- / Page-
	1		1





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
2abc	2	DVD 2	2				
3def	3	CD - STB 3	3				
4ghi	4	VIDEO 4	4				
5jkl	5	TAPE 5	5				
6mno	6	TUNER 6	6				
7pqrs	7	AUX - HDD 7	7				
8tuv	8	USB 8	8				
9wxyz	9	BLUETOOTH 9	9				
INFO	Info	ANGLE INFO	Info / Angle				
0	0	HDMI - SAT 0	0				
EPG	EPG	GUIDE EPG	Guide / EPG / -/--				

