



 

 

 


 
 

 
 






 
 
 

 


 
 







Originalfernbedienung	Ersatzfernbedienung
 DVD / TV / AV	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Mute	 Mute
 Repeat / TV/Radio	 TV/R
 Repeat / TV/Radio	 Shift + Text
 Exit	 Exit
 Up / CH+	 Up
 Up / CH+	 Ch +

Originalfernbedienung	Ersatzfernbedienung
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Pg Up	 Shift + Ch +
 Pg Dn	 Shift + Ch -
 Title	 Smart
 Info	 Info
 Goto / FAV	 Pre Ch
 Audio	 Dual
 Sub-T	 Subt
 Zoom / TTX	 Text
 Zoom / TTX	 Eject
 Setup	 Options





Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

	Menu / EPG		Menu
	Menu / EPG		Guide
	USB		Media
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	Copy/Delete / Rec		Rec
	Red / <<<		Red
	Red / <<<		<<<
	Green / >>>		Green
	Green / >>>		>>>
	Yellow / I<<<		Yellow
	Yellow / I<<<		I<<<
	Blue / >>>I		>>>I
	Blue / >>>I		Blue

Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------