
 





 
 




 
 
 






Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Pause / Stop		Pause
	Pause / Stop		Stop
	l<<		l<<
	>>l		>>l
	CH +		Ch +
	CH -		Ch -
	Vol +		Vol +
	Vol -		Vol -
	*		Smart
	Input		AV
	TV / DVD Mode		TV/R
	Mute		Mute
	Language		Dual
	DVD Menu		D. Menu
	DVD Menu		Menu
	Tools		Options
	Up		Up
	Left / <<		Left
	Left / <<		<<
	Right / >>		Right
	Right / >>		>>
	Play / Enter		Ok
	Play / Enter		Play
	Down		Down
	[...]		Subt
	Open / Close		Eject
	Zoom		Shift + Eject
	[+]		Info
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide

Originalfernbedienung Ersatzfernbedienung

