 


 


 
 


 
 
 
 

 



 


 

 

 
 
 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV / STB		Smart
	Mute		Mute
	Aspect		3D
	V-Format		Format
	Sleep		Sleep
	Audio		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	SUB		Subt
	TXT		Text
	Page +		Shift + Ch +
	Page -		Shift + Ch -
	Back		Back
	TV / Radio		TV/R
	Menu		Menu
	Exit		Exit
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok



