



 

 





 




 
 





 




 

 

 



 


 



 





 


 
 

 







 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/Timeshift		0
	[]/16:9/4:3		Format
	Up		Up
	OK		Ok
	Play		Play
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	>>/Sort		>>
	Left		Left
	<</Jup		<<
	<<		<<
	>>		>>
	Stop		Stop
	Return		Back
	Vol+		Vol +
	Vol-		Vol -
	CH Tv/Folder+		Ch +
	CH Tv/Folder-		Ch -
	TV/HDTV		Red
	Movie		Green
	Music		Yellow
	Photo		Blue



