



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	HDTV		Red
	Movie		Green
	Music		Yellow
	Photo		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	16:9 / 4:3		Format

Originalfernbedienung Ersatzfernbedienung

	Zoom		Eject
	Left / <<		Left / <<
	Right / >>		Right / >>
	Up / Time Shift		Up
	Down		Down
	Right / >> / Sort		Right
	Right / >> / Sort		>>
	Left / << / Jump		Left
	Left / << / Jump		<<
	Play/Pause / OK		Ok
	Play/Pause / OK		Play
	Play/Pause / OK		Pause
	Vol +		Vol +
	Vol -		Vol -
	Stop / Return		Back
	Stop / Return		Stop
	TV CH +		Ch +





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	TV CH -		Ch -				
	Info		Info				
	Subtitle		Subt				
	Favorite		Pre Ch				
	Goto		Smart				
	Setup		Options				
	Audio		Dual				
	Repeat		Text				
	Shuffle		TV/R				
	TV Out		AV				
	Title		Media				
	Menu		Menu				
	Function		D. Menu				
	Guide		Guide				
	Schedule Bookmark / Rec		List				
	Add / Delete		3D				
	Rec		Rec				

