
 
 



 

 

 


 

 

 


 


 
 
 
 

 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	OK Enter
Audio Off		Mute	
Slow Up		Ch +	
Stop		Stop	
Slow Down		Ch -	
Subt.		Subt	
Auto/Track		Sleep	
Pause		Pause	
Rep/A-B		TV/R	
Title		List	
Repeat/1/All		Text	
Zoom		Eject	
DVD/TV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	