



Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Power		Power
	VCR		Shift + 4
	DVD		Shift + 2
	TV / VCR		TV/Radio /
	TV / View		Smart / List
	2		2
	4		4
	1 / Tracking -		1
	5		5
	3 / Tracking +		3
	6		6
	7		7
	8		8
	9		9
	Clear		Exit / Cancel / Clear
	0		0

Originalfernbedienung Ersatzfernbedienung

	P.Scan		Blue / Prime Video / Random
	Menu		Menu / Home
	Setup		Setup / OPT /
	Up		Up
	PR+		CH+ / Page+
	PR-		CH- / Page-
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	Edit		Fav / Marker / PC
	Display		Display / Media
	I<<		I<< / Preset-
	I>>		I>> / Preset+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<		<< / Tune-



[illegible]

Power: **POWER**

Dimmer/Mute: **DIMMER MUTE**

Shift: **SHIFT**

Function Buttons: **TV DVD SAT AUX**

Row 1: **SLOW STEP-FREEZE HOLD REC MODE**

Row 2: **PLAY PAUSE STOP**

Row 3: **TUNE- TUNE+ PRESET- PRESET+**

Row 4: **LEFT RIGHT F.F. B.F.**

Row 5: **TITLE LANG I/II EQ SURROUND**

Row 6: **SOUND AUDIO SUBTITLE PROGRAM**

Row 7: **FORMAT SIZE TIMER TV/RADIO**

Row 8: **PICTURE ZOOM SLEEP RDS**

Row 9: **TOP MENU OPT-TOOLS GOTO AV INPUT**

Row 10: **D.MENU SETUP TEXT**

Navigation: **MENU** (left), **OK** (center), **INFO** (right), **RETURN** (right), **BACK** (right)

Row 11: **CLEAR EXIT CANCEL LIST SMART MEDIA DISPLAY**

Row 12: **+ VOL -**

Row 13: **TV DVD CD-STB**

Row 14: **1 2 3**

Row 15: **VIDEO TAPE TUNER**

Row 16: **4 5 6**

Row 17: **AUX-HDD USB BLUETOOTH**

Row 18: **7 8 9**

Row 19: **PC**

Row 20: **GUIDE EPG 0 FAV MARKER**

Row 21: **NETFLIX APP YouTube Prime Video**

Row 22: **SEARCH REPEAT REPEAT A-B RANDOM**

Logo: **Mandis shop**

Website: **www.mandis.tv**



Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Power		Power
	VCR		Shift + 4
	DVD		Shift + 2
	TV / VCR		TV/Radio /
	TV / View		Smart / List
	2		2
	4		4
	1 / Tracking -		1
	5		5
	3 / Tracking +		3
	6		6
	7		7
	8		8
	9		9
	Clear		Exit / Cancel / Clear
	0		0

Originalfernbedienung Ersatzfernbedienung

	P.Scan		Blue / Prime Video / Random
	Menu		Menu / Home
	Setup		Setup / OPT /
	Up		Up
	PR+		CH+ / Page+
	PR-		CH- / Page-
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	Edit		Fav / Marker / PC
	Display		Display / Media
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<		<< / Tune-



[illegible]

Power **DIMMER MUTE** **SHIFT**
TV **DVD** **SAT** **AUX**
 SLOW STEP-FREEZE HOLD REC MODE
 [Play] [Pause] [Stop] [Red Dot]
 TUNE- TUNE+ PRESET- PRESET+
 [Left] [Right] [Double Left] [Double Right]
 TITLE LANG I/II EQ SURROUND
 SOUND AUDIO SUBTITLE [Up Arrow]
 FORMAT SIZE TIMER PROGRAM
 PICTURE ZOOM SLEEP TV/ RADIO
 TOP MENU OPT-TOOLS GOTO RDS
 D.MENU SETUP TEXT AV INPUT
HOME **ANGLE**
MENU [Up Arrow] **INFO**
 [Left Arrow] **OK** [Right Arrow]
 [Down Arrow]
CLEAR **RETURN**
EXIT **BACK**
CANCEL **LIST**
+ **SMART** **+**
VOL **MEDIA** **CH**
- **DISPLAY** **PAGE**
- **-**
TV **DVD** **CD- STB**
1 **2** **3**
VIDEO **TAPE** **TUNER**
4 **5** **6**
AUX- HDD **USB** **BLUETOOTH**
7 **8** **9**
HDMI- SAT **PC**
GUIDE **0** **FAV**
EPG **MARKER**
NETFLIX **APP** **YouTube** **Prime Video**
SEARCH **REPEAT** **REPEAT A-B** **RANDOM**
Mandis
shop
www.mandis.tv