



 

 



 

 



 

 


















**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Power		Power
	Picture		Picture / Format
	Sound		Sound / Title
	Multimedia		Display / Media
	Source		AV / Input / RDS
	Aspect		Shift + Picture / Format
	Up / PR +		CH+ / Page+
	Up / PR +		Up
	Recall		Back / Return
	Left / Vol -		Left
	Left / Vol -		Vol-
	Menu		Menu / Home
	Right / Vol +		Vol+
	Right / Vol +		Right
	Prev PR		Fav / Marker / PC
	Down / PR -		Down

**Originalfernbedienung    Ersatzfernbedienung**

	Down / PR -		CH- / Page-
	OK		OK
	Red / P.Mode		Red / Netflix / Search
	Green / P.Still		Green / APP / Repeat
	Yellow / P.Swap		Yellow / YouTube / Repeat
	Blue / P.Input		Blue / Prime Video / Random
	Dynamic Bass		Smart / List
	3D - Panorama		TV/Radio /
	P.PR +		Shift + CH+ /
	Audio I / II		Audio / Lang I/II
	Still		Pause / Step / Freeze
	P.PR -		Shift + CH- /
	1		1
	2		2
	3		3
	4		4
	5		5



