

 
 
 
 
 
 
 
 
 
 

 









 


 

 

 

 
 
 
 
 
 
 
 
 
 
 
 
 

 

 



 

 
 

 


 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	VCR		Smart
	DVD		Media
	Open / Close		Eject
	Title / PBC		Text
	Menu		Menu
	Display		Info
	Input		AV
	Up / PR +		Up
	Up / PR +		Ch +
	Down / PR -		Down
	Right		Right
	Left		Left
	Enter / OK		Ok
	Down / PR -		Ch -
	Setup		D. Menu
	Clear / 3D		Red

Originalfernbedienung Ersatzfernbedienung

	Repeat		Shift + Text
	A-B		Shift + Red
	Subtitle		Subt
	Audio		Dual
	I<< Prev		I<<
	Play / Pause		Play
	Play / Pause		Pause
	Next >>I		>>I
	<<		<<
	>>		>>
	Stop		Stop
	Program		Sleep
	CLK / CNT		List
	Search		Shift + TV/R
	Zoom		Shift + Eject
	Rec		Rec
	TV / VCR		TV/R





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Angle / Speed		Format				
	1 / Tracking -		1				
	1 / Tracking -		Vol -				
	2		2				
	3 / Tracking +		3				
	3 / Tracking +		Vol +				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	System		Options				

