





 



 
 
 

 



 

 

 

 




 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Open / Close		Eject
	VCR		Media
	DVD		Smart
	Input		AV
	1 / Tracking -		1
	2		2
	3 / Tracking +		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P.Scan		Pre Ch
	Clear		Exit

**Originalfernbedienung Ersatzfernbedienung**

	Menu		Menu
	Setup		Options
	Up / PR+		Up
	Up / PR+		Ch +
	Down / PR-		Down
	Down / PR-		Ch -
	Right		Right
	Left		Left
	Enter		Ok
	Skip		Back
	Display		Info
	Subtitle		Subt
	Audio		Dual
	Edit		Guide
	Zoom		Shift + Eject
	Play/Pause		Pause
	<< REW		<<



