



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------|--|-------|
| | --- | | Power |
| | Prog | | Sleep |
| | Display | | Info |
| | Eject | | Eject |
| | N/P | | Green |
| | Subtitle | | Subt |
| | Language | | Dual |
| | Angle | | Red |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------|--|---------------|
| | 0 | | 0 |
| | 10+ | | Guide |
| | Time | | Shift + AV |
| | Setup | | Options |
| | Zoom | | Shift + Eject |
| | Up | | Up |
| | Left | | Left |
| | Right | | Right |
| | Down | | Down |
| | Mute | | Mute |
| | L/R | | Back |
| | Step | | Yellow |
| | << | | << |
| | >> | | >> |
| | Slow | | Blue |
| | Play | | Play |
| | Pause | | Pause |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------------|---|--------------|
| | I<< | | I<< |
| | >>I | | >>I |
| | Stop | | Stop |
| | A-B | + | Shift + Play |
| | Repeat | | Text |
| | Title | | TV/R |
| | Menu | | Menu |
| | Vol+ | | Vol + |
| | Vol- | | Vol - |
| | PScan/Normal | | Format |
| | Video Mode | | AV |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

