



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Tv/DVB-T		Smart
	[ ]/Line		Media
	[ + ]/Display		Info
	[ ≡ ]/TXT		Text
	PIP On/Off		Shift + 3D
	PIP Swap		Shift + Subt
	PIP Source		Shift + AV
	PIP Sound		Shift + TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	-/--		Shift + Guide
	PRE		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -
	MS		Back
	[▼]/Still		AV
	Timer/Sleep		Shift + Power
	[  ]/Tv Menu		Menu
	-I/I-/P.STD		Shift + Format
	-I/I-/S.STD		Shift + Dual
	Up/P+		Up
	Down/P-		Down



 


 

 



 





 
 





Originalfernbedienung Ersatzfernbedienung

	Right/Vol+		Right
	Left/Vol-		Left
	Enter		Ok
	[<>]/P.Size		Format
	-IXI-/Exit		Exit
	Open/Close		Eject
	Rec		Rec
	Stop		Stop
	Play		Play
	Pause		Pause
	<</< Slow		<<
	Slow >/>>		>>
	I<</<I Step		I<<
	Step I>/>>I		>>I
	Red/Setup		Red
	Green/Input		Green
	Yellow/Title		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue/Menu		Blue
	Timer/repeat		Shift + Text
	[≡i]/A-B		Shift + Info
	[ /≡]/Audio		Dual
	[≡♦]/Subtitle		Subt
	[≡?]/Goto		Options
	[≡+]/Program/Me		TV/R
	[<≡]/List/Angle		Shift + Ch -
	[≡>]/Bookmark/O		Shift + Ch +
	[≡o]/Zoom/EPG		Guide
	[≡X]/Cancel/i		3D

