 


 

 

 
 

 

 
 

 


















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|--------|
|  | Power |  | Power |
|  | Sleep |  | Sleep |
|  | CBL/SAT |  | 1 |
|  | DVD |  | 2 |
|  | Blu-ray |  | 3 |
|  | Game |  | 4 |
|  | AUX |  | 5 |
|  | Media Player |  | 6 |
|  | USB |  | 7 |
|  | TV Audio |  | 8 |
|  | Tuner |  | 9 |
|  | Bluetooth |  | Guide |
|  | Internet Radio |  | Pre Ch |
|  | Mute |  | Mute |
|  | CH/Page+ |  | Ch + |
|  | CH/Page- |  | Ch - |






 


 
 

 





 

 



 


 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------|
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Eco |  | 3D |
|  | Info |  | Info |
|  | Option |  | Options |
|  | Back |  | Back |
|  | Setup |  | Menu |
|  | Enter |  | Ok |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | I<</Tune- |  | I<< |
|  | >>I/Tune+ |  | >>I |
|  | Green/Movie |  | Green |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|--------|
|  | Power |  | Power |
|  | Sleep |  | Sleep |
|  | CBL/SAT |  | 1 |
|  | DVD |  | 2 |
|  | Blu-ray |  | 3 |
|  | Game |  | 4 |
|  | AUX |  | 5 |
|  | Media Player |  | 6 |
|  | USB |  | 7 |
|  | TV Audio |  | 8 |
|  | Tuner |  | 9 |
|  | Bluetooth |  | Guide |
|  | Internet Radio |  | Pre Ch |
|  | CH/Page+ |  | Ch + |
|  | CH/Page- |  | Ch - |
|  | Vol+ |  | Vol + |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------|
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | Back |  | Back |
|  | Enter |  | Ok |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Left |  | Left |
|  | Right |  | Right |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | I<</Tune- |  | I<< |
|  | >>I/Tune+ |  | >>I |
|  | Quick Select 1 |  | D. Menu |
|  | Quick Select 4 |  | AV |
|  | Quick Select 3 |  | Eject |
|  | Quick Select 2 |  | Text |

