 



 

 
 
 
 





 


 


 
 

 
 
 

 

 



 
 

 

 




 

 
 
 
 
 
 
 

 





 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Quick Select 1		1
	Quick Select 2		2
	Quick Select 3		3
	Quick Select 4		4
	CBL/SAT		5
	DVD		6
	Blu-ray		7
	Game		8
	AUX		9
	Tv Audio		Guide
	Tuner		0
	Memory		Pre Ch
	Band		List
	Shift		AV
	Mode		Exit
	Channel +		Ch +

 


 

 

 
 
 

 
 

 
 
 
Originalfernbedienung Ersatzfernbedienung

	Channel -		Ch -
	Tune +		>>
	Tune -		<<
	Mute		Mute
	CH Level		3D
	Sleep		Sleep
	Dimmer		Text
	Search		TV/R
	Info		Info
	Audio		Dual
	Back		Back
	Setup		Menu
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	Night		Options
	Restorer		Eject
	Tone		D. Menu
	< Surround		Yellow
	Surround >		Blue
	Audio Delay +		>>
	Audio Delay -		<<

Originalfernbedienung Ersatzfernbedienung

