






 







 
 
 
 
 
 







 

 


 
 






 



 








 



 





Originalfernbedienung Ersatzfernbedienung

 


 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 

 
 

 
 




 
 



	Power AMP		Power
	Power CD	 + 	Shift + Power
	1 CD		1
	2 CD		2
	3 CD		3
	4 CD		4
	5 CD		5
	6 CD		6
	7 CD		7
	8 CD		8
	9 CD		9
	0 CD		0
	+10 CD		Guide
	Clear CD		Pre Ch
	Source CD		AV
	Menu CD		Menu
	Mode CD		Dual

Originalfernbedienung Ersatzfernbedienung


 







 
 
 


 

	Info CD		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Preset + CD		Ch +
	Preset - CD		Ch -
	Enter CD		Ok
	Up CD		Up
	Down CD		Down
	Right CD		Right
	Left CD		Left
	Pure Direct CD		Options
	Play/Pause CD		Play
	Stop CD		Stop
	<< CD		<<
	>> CD		>>
	I<< CD		I<<




Originalfernbedienung Ersatzfernbedienung

	>>I CD		>>I
	Repeat CD		Text
	Program CD		Sleep
	Random CD		Subt
	Dimmer CD		Format
	CD AMP		TV/R
	Recorder AMP		Red
	Network AMP		Exit
	Phono		Smart
	Tuner		Back
	Internet Radio Preset 1		List
	Internet Radio Preset 2		D. Menu
	Internet Radio Preset 3		3D
	Power NET		Media
	Enter NET		Shift + Ok
	Up NET		Shift + Up
	Down NET		Shift + Down

Originalfernbedienung Ersatzfernbedienung

	Right NET		Shift + Right
	Left NET		Shift + Left
	Pure Direct NET		Shift + Options
	1 NET		Shift + 1
	2 NET		Shift + 2
	3 NET		Shift + 3
	4 NET		Shift + 4
	5 NET		Shift + 5
	6 NET		Shift + 6
	7 NET		Shift + 7
	8 NET		Shift + 8
	9 NET		Shift + 9
	+10 NET		Shift + Guide
	0 NET		Shift + 0
	Clear NET		Shift + Pre Ch
	Mode NET		Shift + Dual
	<< NET		Shift + <<





Originalfernbedienung Ersatzfernbedienung

	>> NET	SHIFT +	Shift + >>
	Info NET	SHIFT +	Shift + Info
	I<< NET	SHIFT +	Shift + I<<
	>>I NET	SHIFT +	Shift + >>I
	Stop NET	SHIFT +	Shift + Stop
	Play/Pause NET	SHIFT +	Shift + Play
	Preset + NET	SHIFT +	Shift + Ch +
	Preset - NET	SHIFT +	Shift + Ch -
	Menu NET	SHIFT +	Shift + Menu
	Source NET	SHIFT +	Shift + AV
	AUX	SHIFT +	Shift + TV/R
	Dimmer NET	SHIFT +	Shift + Format
	Random NET	SHIFT +	Shift + Subt
	Program NET	SHIFT +	Shift + Sleep
	Repeat NET	SHIFT +	Shift + Text

Originalfernbedienung Ersatzfernbedienung

