 

 

 

 

 
 





 


 
 
 


 
 
 




 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX1		5
	Media Player		6
	TV Audio		8
	AUX2		TV/R
	Tuner		9
	USB		7
	CD		Subt
	Bluetooth		0
	Internet Radio		Guide
	CH/Page+		Pre Ch
	CH/Page-		Ch +

 

 

 

 

 
 





 


 
 
 


 
 
 




 



Originalfernbedienung Ersatzfernbedienung

	CH/Page-		Ch -
	Eco		3D
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Info		Info
	Option		Options
	Back		Back
	Setup		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<</Tune-		I<<
	Pause		Pause
	Play		Play





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX1		5
	Media Player		6
	TV Audio		8
	AUX2		TV/R
	Tuner		9
	USB		7
	CD		Subt
	Bluetooth		0
	Internet Radio		Guide
	CH/Page+		Pre Ch
	CH/Page-		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH/Page-		Ch -
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Back		Back
	I<</Tune-		I<<
	Play		Play
	Pause		Pause
	>>I/Tune+		>>I
	Quick Select 1		D. Menu
	Quick Select 2		Text
	Quick Select 3		Eject



