

 
Originalfernbedienung Ersatzfernbedienung

	ON / Source		Power
	OFF		Shift + Power
	Main ON		Smart
	Main OFF		Shift + Smart
	Dolby/DTS		Red
	Dolby/DTS		Green
	Dolby/DTS		Yellow
	DSP Simulation		Blue
	Direct		Shift + Red
	5CH/6CH / Stereo		Shift + Blue
	Stereo		Shift + Green
	Virtual Surround		Shift + Yellow
	1 / PHONO		1
	2 / CD		2
	3 / TUNER		3
	4 / DVD/VDP		4
	5 / TV/DBS		5


 



 

 
Originalfernbedienung Ersatzfernbedienung

	6 / VCR-1		6
	7 / VCR-2		7
	8 / V.AUX		8
	9 / CDR/TAPE		9
	Input Mode		Guide
	Input Analog		0
	Input Ext-In		Pre Ch
	Mode		List
	Band		Dual
	Shift		Subt
	Vol+		Vol +
	Vol-		Vol -
	Channel+		Ch +
	Channel-		Ch -
	Setup		Menu
	Muting		Mute
	Status / Display		Info

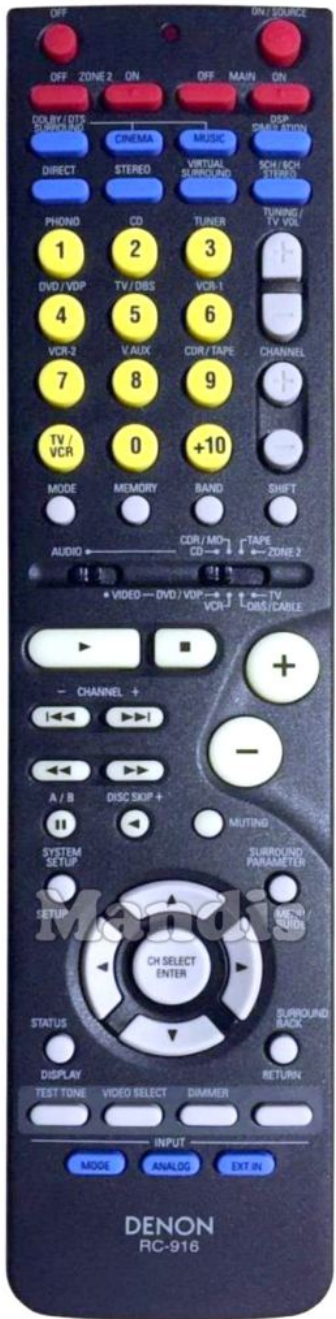



**Originalfernbedienung Ersatzfernbedienung**

	Surround / Back / Return		Back
	Test Tone		Text
	Video Select		AV
	Dimmer		Media

**Originalfernbedienung Ersatzfernbedienung**