

 

 





 




 

 





 

 



 



 









 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Quick Select 1		Shift + 1
	Quick Select 2		Shift + 2
	Quick Select 3		Shift + 3
	Quick Select 4		Shift + 4
	CBL/SAT		0
	DVD		2
	Memory		Play / Slow
	Band		Pause / Step / Freeze
	Blu-ray		3
	Game		4
	Shift		Stop / Hold
	Mode		Rec / Rec Mode
	AUX		7
	Portable		5
	Channel +		CH+ / Page+
	Tune +		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Tv Audio		1
	Tuner		6
	Channel -		CH- / Page-
	Tune -		<< / Tune-
	CH Level		Menu / Home
	Sleep		Sleep / Timer
	Dimmer		Shift + Mute / Dimmer
	Search		Red / Netflix / Search
	Info		Info / Angle
	Audio		Audio / Lang I/II
	Volume+		Vol+
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Volume-		Vol-
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	Setup		Setup / OPT /
	Back		Back / Return
	Night		Green / APP / Repeat
	Restorer		Yellow / YouTube / Repeat
	Tone		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	< Surround		I<< / Preset-
	Surround >		>>I / Preset+
	Audio Delay -		Display / Media
	Audio Delay +		Smart / List

Originalfernbedienung Ersatzfernbedienung

