

 


 
 
 

 

 



 

 

 

 

 

 


 







 




 







 











 










Originalfernbedienung Ersatzfernbedienung

	ON		Power
	OFF		Shift + Power
	Input PHONO		1
	Input CD		2
	Input TUNER		3
	Input DVD/VDP		4
	Input TV/DBS		5
	Input VCR		6
	Input VCR-2		7
	Input V.AUX		8
	Input CDR/TAPE		9
	Input AUX		0
	Standard		Red
	Cinema		Green
	Music		Yellow
	DSP Simulation		Blue
	Direct		Shift + Red

Originalfernbedienung Ersatzfernbedienung

	Stereo		Shift + Green
	Virtual Surround		Shift + Yellow
	5CH/7CH Stereo		Shift + Blue
	Tuning+		>>
	Tuning-		<<
	Channel+ /		>>I
	Channel- / Preset-		I<<
	Mode		Play
	Memory		Pause
	Band		Stop
	Shift		Rec
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Up		Up
	Left		Left
	Enter		Ok





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	Status / Display		Info
	Surround Back		Back
	Test Tone		Text
	Surround		D. Menu
	Video Select		AV
	Setup		Menu
	Dimmer		Subt
	Speaker		Dual
	Input Mode		Shift + 1
	Input Analog		Shift + 2
	Input Ext.In		Shift + 3

Originalfernbedienung Ersatzfernbedienung