


 

 
 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	NTSC/PAL		Format
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Clear		Exit
	I<< Skip		I<<
	Skip >>I		>>I

Originalfernbedienung Ersatzfernbedienung

	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Still/Pause		Pause
	Play		Play
	Menu		Menu
	Title		TV/R
	Display		Info
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Select		Ok
	Subtitle		Subt
	Audio		Dual
	Angle		Red





**Originalfernbedienung    Ersatzfernbedienung**

	Prog/Direct		Sleep
	Call		Pre Ch
	Set Up		Options
	Repeat		Text
	A-B Repeat		AV
	Random		3D

**Originalfernbedienung    Ersatzfernbedienung**