




 



 

 
 
 



 




 

 






 





 








Originalfernbedienung Ersatzfernbedienung

	OFF	 + 	Shift + Power
	ON / Source		Power
	Power DVD/VDP		Red / Netflix / Search
	Power VCR		Green / APP / Repeat
	Power		Yellow / YouTube / Repeat
	Power TV		Blue / Prime Video / Random
	Dolby/DTS		Eject / Surround
	Dolby/DTS		Picture / Format
	Dolby/DTS		Sound / Title
	DSP Simulation		Subtitle / EQ
	Direct		Zoom / Size
	Stereo		Audio / Lang I / II
	Virtual Surround		Sleep / Timer
	5CH/6CH / Stereo		TV/Radio /
	PHONO		9
	CD		3
	TUNER		6

Originalfernbedienung Ersatzfernbedienung

	Tuning+		>> / Tune+
	DVD/VDP		2
	TV/DBS		1
	VCR-1		4
	Tuning-		<< / Tune-
	VCR-2		8
	V.AUX		7
	CDR/TAPE		5
	Channel+		CH+ / Page+
	Channel-		CH- / Page-
	Mode		Play / Slow
	Memory		Pause / Step / Freeze
	Band		Stop / Hold
	Shift		Rec / Rec Mode
	Play CD/MD/CDR-DVD/		Shift + Play /
	Stop CD/MD/CDR-DVD/		Shift + Stop /
	Vol+		Vol+




















**Originalfernbedienung    Ersatzfernbedienung**

	I<< CD/MD/CDR-DVD/	 + 	Shift + I<< / Preset-
	>>I CD/MD/CDR-DVD/	 + 	Shift + >>I / Preset+
	Vol-		Vol-
	<< CD/MD/CDR-DVD/	 + 	Shift + << /
	>> CD/MD/CDR-DVD/	 + 	Shift + >> /
	Pause CD/MD/CDR-DVD/	 + 	Shift + Pause / Step /
	Disc Skip+		D.Menu / Top
	Muting		Mute / Dimmer
	Setup		Setup / OPT /
	Up		Up
	Surround		Info / Angle
	Left		Left
	CH.Select / Enter		OK
	Right		Right
	Status / Display		Display / Media
	Down		Down
	Surround / Back / Return		Back / Return

**Originalfernbedienung    Ersatzfernbedienung**

	Test Tone		Text / Goto
	Video Select		Smart / List
	Dimmer	 + 	Shift + Mute / Dimmer
	Speaker		AV / Input / RDS
	Input Mode		Guide / EPG / -/-
	Input Analog		0
	Input Ext-In		Fav / Marker / PC

