 






 









 


 
 



 

 

 

 






Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Clear	 Exit
 Direct	 TV/R
 Program	 Sleep
 Call	 Back
 Random	 Smart

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 Repeat	 Text
 A-B	 Pre Ch
 Super Audio CD Setup	 Menu
 Title	 List
 Artist	 Media
 Display	 Info
 Time	 AV
 Pause	 Pause
 Play	 Play
 Stop	 Stop
 >>I	 >>I
 I<<	 I<<
 >>	 >>
 <<	 <<

