 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		Shift + 0
	DVD		Shift + 2
	TV Audio		Shift + 1
	Blu-ray		Shift + 5
	AUX1		Shift + 7
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Shift + Fav / Marker / PC
	AUX2		Shift + Guide / EPG / -/--
	Phono		Shift + 4
	USB		Shift + 8
	Media Player		Display / Media
	CD		Shift + 3
	Online Music		Smart / List
	Internet Radio		Shift + Smart / List
	CH/Page+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Eco		D.Menu / Top
	Info		Info / Angle
	Up		Up
	Option		Shift + Setup / OPT / Tools
	Left		Left
	Right		Right
	Back		Back / Return
	Down		Down
	Setup		Setup / OPT /
	Home		Menu / Home
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	I<</Tune-		I<< / Preset-
	I<</Tune-		Shift + << /
	>>I/Tune+		>>I / Preset+
	>>I/Tune+		Shift + >> /
	<<		<< / Tune-
	>>		>> / Tune+
	Smart Select 1		Shift + Red / Netflix /
	Smart Select 2		Shift + Green / APP /
	Smart Select 3		Shift + Yellow / YouTube /
	Smart Select 4		Shift + Blue / Prime
	Green/Movie		Green / APP / Repeat
	Red/Music		Red / Netflix / Search
	Blue/Game		Blue / Prime Video / Random
	Yellow/Pure		Yellow / YouTube / Repeat
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		OK





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		Shift + 0
	DVD		Shift + 2
	TV Audio		Shift + 1
	Blu-ray		Shift + 5
	AUX1		Shift + 7
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Shift + Fav / Marker / PC
	AUX2		Shift + Guide / EPG / -/-
	Phono		Shift + 4
	USB		Shift + 8
	Media Player		Display / Media
	CD		Shift + 3
	Online Music		Smart / List
	Internet Radio		Shift + Smart / List
	CH/Page+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Right		Right
	Back		Back / Return
	Down		Down
	Home		Menu / Home
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<</Tune-		Shift + << /
	I<</Tune-		I<< / Preset-
	>>/Tune+		>>I / Preset+



 
 


Originalfernbedienung Ersatzfernbedienung

The image shows a black Mandis TV remote control with a silver-colored top section. The remote features a variety of buttons for controlling a television, including a power button, dimmer/mute button, and shift button at the top. Below these are four function buttons: TV, DVD, SAT, and AUX. The main body contains numerous buttons for channel navigation, volume, and various TV functions like sound, picture, and subtitles. At the bottom, there are buttons for streaming services (Netflix, App, YouTube, Prime Video) and a search bar.



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		Shift + 0
	DVD		Shift + 2
	TV Audio		Shift + 1
	Blu-ray		Shift + 5
	AUX1		Shift + 7
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Shift + Fav / Marker / PC
	AUX2		Shift + Guide / EPG / -/--
	Phono		Shift + 4
	USB		Shift + 8
	Media Player		Display / Media
	CD		Shift + 3
	Online Music		Smart / List
	Internet Radio		Shift + Smart / List
	CH/Page+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Right		Right
	Back		Back / Return
	Down		Down
	Home		Menu / Home
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<</Tune-		Shift + << /
	I<</Tune-		I<< / Preset-
	>>I/Tune+		>>I / Preset+



