 



 
 






 




 
 
 





 

 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter2		Pre Ch
	Green/Movie		Green
	Red/Music		Red
	Blue/Game		Blue
	Yellow/Pure		Yellow
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

 



 




 

 










 

 





 
 

	Play		Play
	I<</Tune-		I<<
	>>I/Tune+		>>I
	<<		<<
	Pause		Pause
	Stop		Stop
	>>		>>
	Info		Info
	Option		Options
	Setup		Menu
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter2		Pre Ch
	Play		Play
	I<</Tune-		I<<
	>>I/Tune+		>>I
	<<		<<
	Pause		Pause

**Originalfernbedienung    Ersatzfernbedienung**

 



 
 






 




 
 
 





 






 

	Stop		Stop
	>>		>>
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH/Page+		Ch +
	CH/Page-		Ch -
	Favorite Station 1		D. Menu
	Favorite Station 2		Text
	Favorite Station 3		Eject
	Favorite Station 4		AV







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter2		Pre Ch
	Sleep		Sleep
	Play		Play
	I<</Tune-		I<<
	>>I/Tune+		>>I
	<<		<<

**Originalfernbedienung    Ersatzfernbedienung**

	Pause		Pause
	Stop		Stop
	>>		>>
	Back		Back
	Up		Up
	Enter		Ok
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	CH/Page+		Ch +
	CH/Page-		Ch -
	Mute		Mute
	Favorite Station 1		D. Menu
	Favorite Station 2		Text
	Favorite Station 3		Eject





