 








 




 

















**Originalfernbedienung Ersatzfernbedienung**

|   |                           |   |               |
|---|---------------------------|---|---------------|
|    | On Source                 |    | Power         |
|    | Off                       |    | Shift + Power |
|    | Quick Select 1/(DVD)      |    | 1             |
|    | Quick Select 2/(SAT/CBL)  |    | 2             |
|    | Quick Select 3/(VCR/iPod) |    | 3             |
|    | DVD                       |    | 4             |
|    | TV                        |    | 5             |
|    | iPod                      |    | 6             |
|    | Net/USB                   |    | 7             |
|    | DTU/TU                    |    | 8             |
|   | SAT TU                    |   | 9             |
|  | Play                      |  | Play          |
|  | Stop                      |  | Stop          |
|  | Pause/Shift               |  | Pause         |
|  | Memory/Skip+/TV Input     |  | Rec           |
|  | >> TU                     |  | >>            |
|  | << TU                     |  | <<            |

**Originalfernbedienung Ersatzfernbedienung**

|   |                        |   |         |
|---|------------------------|---|---------|
|    | CH+/>>>I               |    | Ch +    |
|    | CH-/I<<<               |    | Ch -    |
|    | Vol+                   |    | Vol +   |
|    | Vol-                   |    | Vol -   |
|    | Mute                   |    | Mute    |
|    | Menu                   |    | Menu    |
|    | CH Level/HDMI Control  |    | Info    |
|    | Setup/Search           |    | Options |
|    | Return                 |    | Back    |
|    | Source Select/Top Menu |    | D. Menu |
|   | Up                     |   | Up      |
|  | Down                   |  | Down    |
|  | Right                  |  | Right   |
|  | Left                   |  | Left    |
|  | Enter                  |  | Ok      |








**Originalfernbedienung    Ersatzfernbedienung**

|   |                           |   |               |
|---|---------------------------|---|---------------|
|    | On/Source                 |    | Power         |
|    | Off                       |    | Shift + Power |
|    | Quick Select 1/(DVD)      |    | 1             |
|    | Quick Select 2/(SAT/CBL)  |    | 2             |
|    | Quick Select 3/(VCR/iPod) |    | 3             |
|    | DVD                       |    | 4             |
|    | TV                        |    | 5             |
|    | iPod                      |    | 6             |
|    | NET/USB                   |    | 7             |
|    | DTU/TU                    |    | 8             |
|   | SAT TU                    |   | 9             |
|  | Play                      |  | Play          |
|  | Stop                      |  | Stop          |
|  | Pause/Shift               |  | Pause         |
|  | Memory/Skip+/Tv Input     |  | Rec           |
|  | >> TU                     |  | >>            |
|  | << TU                     |  | <<            |

**Originalfernbedienung    Ersatzfernbedienung**

|   |              |   |         |
|---|--------------|---|---------|
|    | CH+ />>>I    |    | Ch +    |
|    | CH-/I<<<     |    | Ch -    |
|    | Vol+         |    | Vol +   |
|    | Vol-         |    | Vol -   |
|    | Mute         |    | Mute    |
|    | Menu         |    | Menu    |
|    | Setup/Search |    | Options |
|    | Return       |    | Back    |
|    | Up           |    | Up      |
|    | Down         |    | Down    |
|   | Right        |   | Right   |
|  | Left         |  | Left    |
|  | Enter        |  | Ok      |
|   |              |   |         |
|   |              |   |         |
|   |              |   |         |






**Originalfernbedienung    Ersatzfernbedienung**

|   |                           |   |               |
|---|---------------------------|---|---------------|
|                                      | On Source                 |                                | Power         |
|                                      | Off                       |                                | Shift + Power |
|                                      | Quick Select 1/(DVD)      |                                | 1             |
|                                      | Quick Select 2/(SAT/CBL)  |                                | 2             |
|                                      | Quick Select 3/(VCR/iPod) |                                | 3             |
|                                      | DVD                       |                                | 4             |
|                                      | TV                        |                                | 5             |
|                                      | iPod                      |                                | 6             |
|                                      | Net/USB                   |                                | 7             |
|                                      | DTU/TU                    |                                | 8             |
|                                     | SAT TU                    |                               | 9             |
|                                    | Play                      |                              | Play          |
|                                    | Stop                      |                              | Stop          |
|                                    | Pause/Shift               |                              | Pause         |
|                                    | Memory/Skip+/Tv Input     |                              | Rec           |
|                                    | >> TU                     |                              | >>            |
|  | << TU                     |  | <<            |

**Originalfernbedienung    Ersatzfernbedienung**





 

 


 



 




 
|   |              |   |         |
|---|--------------|---|---------|
|    | CH+ />>>I    |    | Ch +    |
|    | CH- /I<<<    |    | Ch -    |
|    | Vol+         |    | Vol +   |
|    | Vol-         |    | Vol -   |
|    | Mute         |    | Mute    |
|    | Menu         |    | Menu    |
|    | Setup/Search |    | Options |
|    | Return       |    | Back    |
|    | Up           |    | Up      |
|    | Down         |    | Down    |
|   | Right        |   | Right   |
|  | Left         |  | Left    |
|  | Enter        |  | Ok      |
|   |              |   |         |
|   |              |   |         |
|   |              |   |         |




**Originalfernbedienung Ersatzfernbedienung**

|   |                           |   |               |
|---|---------------------------|---|---------------|
|    | On/Source                 |    | Power         |
|    | Off                       |    | Shift + Power |
|    | Quick Select 1/(DVD)      |    | 1             |
|    | Quick Select 2/(SAT/CBL)  |    | 2             |
|    | Quick Select 3/(VCR/iPod) |    | 3             |
|    | DVD                       |    | 4             |
|    | TV                        |    | 5             |
|    | iPod                      |    | 6             |
|    | NET/USB                   |    | 7             |
|    | DTU/TU                    |    | 8             |
|   | SAT TU                    |   | 9             |
|  | Play                      |  | Play          |
|  | Stop                      |  | Stop          |
|  | Pause/Shift               |  | Pause         |
|  | Memory/Skip+/Tv Input     |  | Rec           |
|  | >> TU                     |  | >>            |
|  | << TU                     |  | <<            |

**Originalfernbedienung Ersatzfernbedienung**

|   |                        |   |         |
|---|------------------------|---|---------|
|    | CH+/>>>I               |    | Ch +    |
|    | CH-/I<<<               |    | Ch -    |
|    | Vol+                   |    | Vol +   |
|    | Vol-                   |    | Vol -   |
|    | Mute                   |    | Mute    |
|    | Menu                   |    | Menu    |
|    | Setup/Search           |    | Options |
|    | Return                 |    | Back    |
|    | Source Select/Top Menu |    | D. Menu |
|    | Up                     |    | Up      |
|   | Down                   |   | Down    |
|  | Right                  |  | Right   |
|  | Left                   |  | Left    |
|  | Enter                  |  | Ok      |
|   |                        |   |         |
|   |                        |   |         |

