


 


 


 








 





 




 

 

 





Originalfernbedienung Ersatzfernbedienung

	DVD Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Prog/Direct		Sleep
	Call		Pre Ch
	Clear		Exit
	Random		Media

Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subt
	Audio		Dual
	Repeat		Text
	A-B Repeat		AV
	Menu		Menu
	Top Menu/PBC		Shift + Menu
	Angle		Red
	Return		Back
	Up		Up
	Enter		Ok
	Down		Down
	Right		Right
	Left		Left
	Display		Info
	Stop		Stop
	Still/Pause		Pause
	Play		Play





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
SLOW/SE << Slow/Search	⇐ ⇐		
/SEARCH >> Slow/Search	⇒ ⇒		
SKIP I<< Skip	⏪ ⏪		
SKIP >>I Skip	⏩ ⏩		
NTSC/PAL NTSC/PAL	PICTURE FORMAT		Format
SETUP Setup	SETTINGS OPT		Options
ZOOM Zoom	SHIFT + ZOOM		Shift + Eject
SLIDE SHOW Slide Show	HOME SMART		Smart

