




 
 


 













 


 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10		Guide
	Clear		Exit
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<

Originalfernbedienung Ersatzfernbedienung

	Slow/Search >>		>>
	Group		Smart
	Stop		Stop
	Still/Pause		Pause
	Play		Play
	Top Menu		D. Menu
	Menu		Menu
	Up		Up
	Left		Left
	Select		Ok
	Right		Right
	Down		Down
	Display		Info
	Return		Back
	Subtitle		Subt
	Audio		Dual
	Angle		Format





**Originalfernbedienung Ersatzfernbedienung**

	Marker		Pre Ch
	Index Skip-		Vol -
	Index Skip+		Vol +
	Page-		Ch -
	Page+		Ch +
	Time Search		TV/R
	Time Mode		Sleep
	Repeat Mode		Text
	A-B Repeat		Shift + Text
	Set Up		Options
	V.S.S.		Media
	Play Mode		Shift + Play
	Audio Only		Mute

**Originalfernbedienung Ersatzfernbedienung**