



 

 

 

 
 
 








**Originalfernbedienung    Ersatzfernbedienung**

	System		Power
	Sleep		Sleep
	CD/HDD/USB/N		Smart
	Function		D. Menu
	SDB/Tone		Media
	Prog		Shift + Sleep
	Random		TV/R
	Repeat		Text
	Play/Pause HDD		Play
	Play/Pause CD		Pause
	Stop/Band		Stop
	I<</CH-		I<<
	>>I/CH+		>>I
	<</Tu-		<<
	>>/TU+		>>
	Play/Pause iPod		Blue
	Mute		Mute

**Originalfernbedienung    Ersatzfernbedienung**

	Vol+		Vol +
	Vol-		Vol -
	Setup		Options
	Menu		Menu
	Up		Up
	Left		Left
	Push/Enter		Ok
	Right		Right
	Down		Down
	Time/Display		Info
	Back		Back
	Music Search		Dual
	< Tape		Ch -
	Tape >		Ch +
	Stop MD/Tape		Shift + Stop
	Play/Pause MD		Shift + Pause
	Tape		Shift + Smart





Originalfernbedienung Ersatzfernbedienung

	MD		Shift + Media
	Genre		Green
	Artist		Yellow
	Album		Shift + Guide
	Track		Eject
	P.List		Red
	Line 1/2		AV
	Dimmer		Format
	Folder		Shift + Info
	Clock		Shift + AV
	Up		Shift + Up
	Left		Shift + Left
	Enter		Shift + Ok
	Right		Shift + Right
	Down		Shift + Down
	Back		Shift + Back
	Edit		Subt

Originalfernbedienung Ersatzfernbedienung

	CD Store		Rec
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	+10		Guide
	Clear		Exit
	Call		Pre Ch

