













 



 

 

 



 























 
 
 



 

 













**Originalfernbedienung Ersatzfernbedienung**

	Sleep		Sleep / Timer
	Clock		Shift + Sleep / Timer
	Dimmer		Shift + Mute / Dimmer
	Power		Power
	Internet Radio		TV/Radio /
	AUX		Shift + 7
	Music Server		Sound / Title
	Bluetooth		Shift + 9
	iPod/USB		Shift + 8
	I<</CH-		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>/CH+		>>I / Preset+
	ADD Favorites		CH+ / Page+
	SDB Tone		Audio / Lang I/II
	Volume+		Vol+
	Call Favorites		CH- / Page-

**Originalfernbedienung Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Volume-		Vol-
	Top Menu		D.Menu / Top
	Info		Info / Angle
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Search		Red / Netflix / Search
	Down		Down
	Setup		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6



