







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	Recall		Back / Return
	PMode		Picture / Format
	I / II		Audio / Lang I/II
	EPG		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Input		AV / Input / RDS
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	FAV		Fav / Marker / PC
	Vol +		Vol+
	ADD / DEL		Shift + Back / Return
	PR +		CH+ / Page+
	Vol -		Vol-
	Cancel		Shift + Exit / Cancel / Clear
	PR -		CH- / Page-
	Red		Red / Netflix / Search



