







































 
 


 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	I-II/Audio		Audio / Lang I/II
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





 
 


 








 















 
**Originalfernbedienung Ersatzfernbedienung**

	-/--/+10		Guide / EPG / -/--
	QV		Info / Angle
	Tv Menu		Menu / Home
	Tv/Text		Text / Goto
	Mix		Setup / OPT /
	Call		Back / Return
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Vol-		Vol-
	Vol+		Vol+
	P-		CH- / Page-
	P+		CH+ / Page+
	Red/DVD Setup		Red / Netflix / Search
	Green		Green / APP / Repeat









Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Subtitle		Subtitle / EQ
	Pause		Pause / Step / Freeze
	Play/Hold		Play / Slow
	Zoom/Size		Zoom / Size
	D.Disp/Reveal		Display / Media
	D.Menu		D.Menu / Top
	Up/Index DVD		Shift + Up
	I<</Cancel		I<< / Preset-
	>>I/Subpage		>>I / Preset+
	Left DVD		Shift + Left
	Enter DVD		Shift + OK
	Right DVD		Shift + Right
	Eject		Eject / Surround
	Stop		Stop / Hold
	Down DVD		Shift + Down

Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	>>		>> / Tune+

